



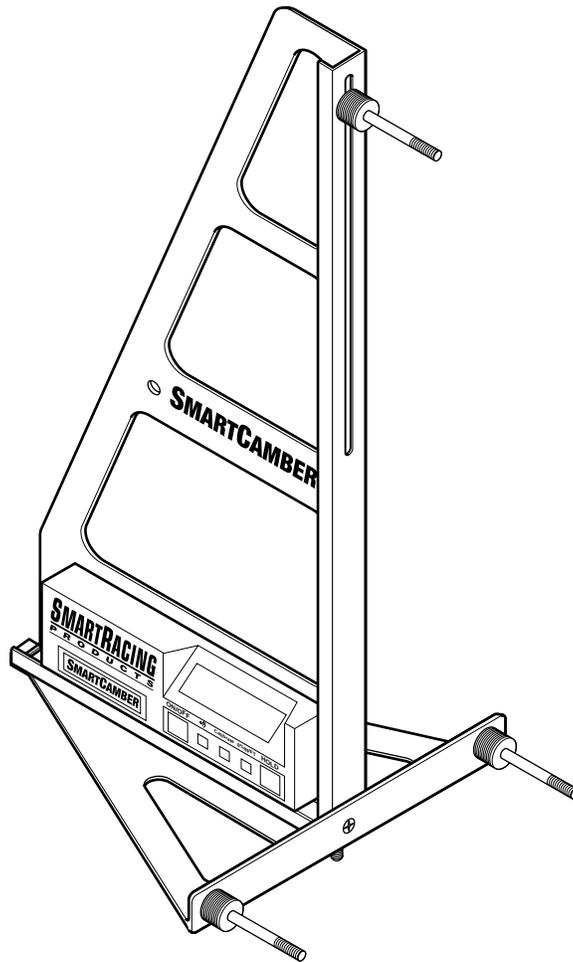

# ***SMARTCAMBER***



*Owner's Manual*

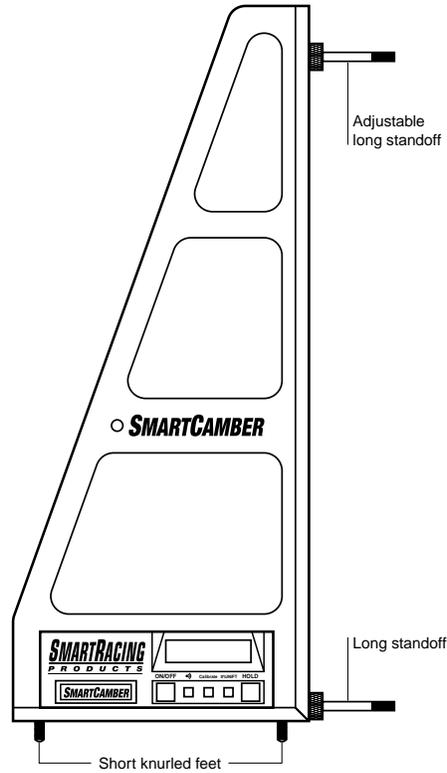

## Contents

Welcome .....	1
Overview .....	1
Battery Installation .....	1
Optional Hands-Free Adapter .....	2
SmartTool - Digital Inclinometer .....	3
Preparing the SmartCamber Tool .....	4
Squaring Your SmartCamber Tool .....	4
Level Surface Setup .....	4
Non-Level Surface Setup/Zero Adjust .....	5
What is Caster? .....	6
Measuring Caster .....	6
What is Camber? .....	8
Measuring Camber .....	8
Non-Level Surface Alignment .....	9
Level Surface Alignment .....	10
Tips and Suggestions .....	11
Options .....	11
Module Calibration for Use Without Frame .....	12



## Welcome!

Thank you for your purchase of our SmartCamber tool. You are now the owner of what we believe is the best portable camber and caster measuring tool available today. Both the occasional user and experienced race car tuner will appreciate the simplicity of the SmartCamber tool and its ability to give fast and accurate results.

We are proud of the fact that our SmartCamber tool is used by some of the fastest car owners in the business. In addition, some of the largest automakers in the world have purchased our tool to teach alignment techniques in their technical training programs. If at any time you have a question or suggestion, please do not hesitate to call.

Thank you,

Craig Watkins

**Please be sure to see the optional parts  
available to you later in this booklet on page 11.**

## Overview

The SmartCamber tool was designed to maximize its measuring potential over a wide variety of wheel/tire combinations. Utilizing repeatable digital technology, the tool allows accurate measuring regardless of where the vehicle is or what angled surface it is on.

There is no misinterpretation with this tool because there are no bubbles or lines to subjectively read. The SmartCamber tool takes all of the guess work out of camber and caster measuring.

Since there are nearly an infinite number of wheel and tire combinations, it was necessary to design a tool that would be quick and easy to use.

The number one design premise was to allow camber and caster to be measured almost anywhere without removing hub caps, lug nuts or jacking the car off of the ground.

Though it is basic in concept, the results are excellent. One fixed and one adjustable standoff allows the owner to use the tool on almost any vehicle.

For toe adjusting - please see our website for our new SmartString tool.

## Battery Installation: (Battery included)

Remove back cover. Attach 9-volt battery to terminals and replace the cover.



## Optional Hands-Free Adapter

The Hands-Free adapter was developed to allow the SmartCamber tool to be attached to the wheel so as suspension adjustments are made, the user can then see the changes as they happen.


Camber angles can be just as easily measured with or without the Hands-Free adapter in place; the performance of the tool is exactly the same. However, the tool will have to be recalibrated for one or the other. (See page 4, Calibrating SmartCamber tool)

### Attaching the Hands Free Adapter

Unscrew the lower standoff (with the attached aluminum thumb wheel). Hook the adapter over the bottom lip of the SmartCamber frame and swing the adapter up against the bottom on the frame (Step 1).


With the 8-32 screw provided, thread and tighten the screw into the Pennut (Step 2).

Thread the long standoff into the far ends of the adapter as illustrated.

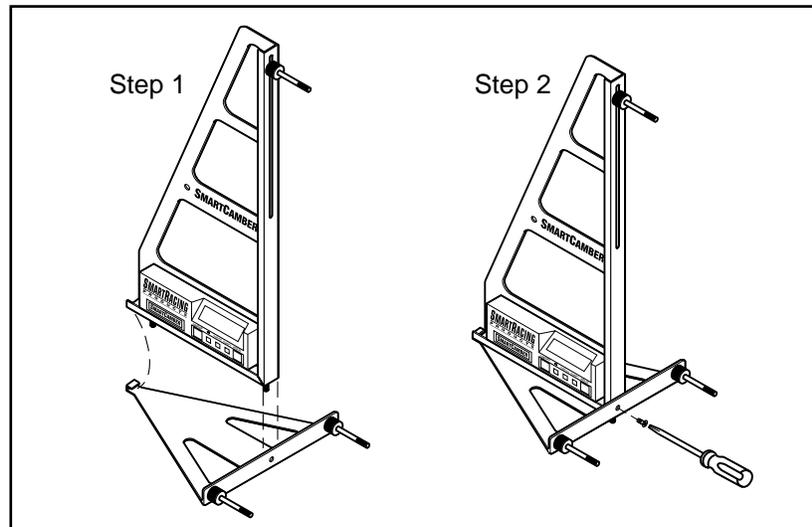

- Note:**
1. The SmartCamber tool will have to be recalibrated if the Hands Free adapter is removed or installed or if the tool is dropped. It should be checked periodically for calibration.
  2. Calibration with the Hands-Free adapter is the same as with just two long standoffs, except the small knurled screws on the bottom will be in more extreme positions. To calibrate follow the same steps on page 4.

## SmartCamber - Digital Inclinometer

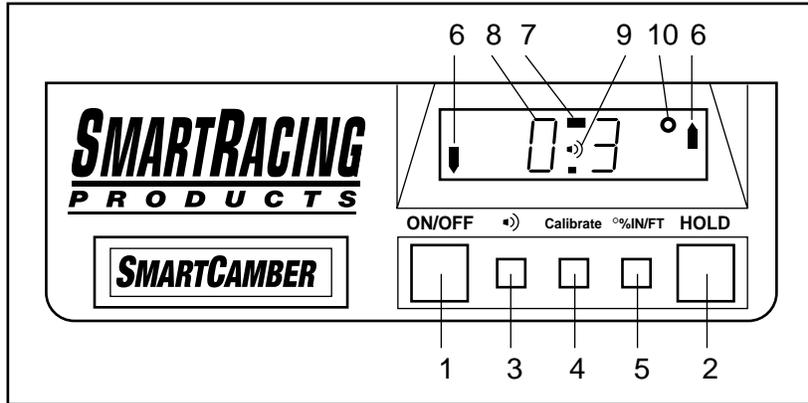

### Controls:

- 1 **ON/OFF** - If left idle for 6 minutes, the **SmartCamber** tool will automatically shut off.
- 2 **HOLD** - Push to “freeze” and “unfreeze” display readings.
- 3 **LISTEN & LEVEL AUDIO** → Push to activate and de-activate the beeper. Beeper will sound at level and plumb.
- 4 **CALIBRATE** (see Calibration procedures)
- 5 **° % in/ft** - Push to change the display units: Degrees (°), Slope (%), Pitch (in/ft).

Pitch readings are in 1/8 in/ft increments. Plus and minus signs indicate when the pitch is slightly more (+) or slightly less (-) than the pitch shown on the display.

25.5°    47.7%    53/4<sub>n.m</sub>

**Note:** The ° % IN/FT button 5 can be used even when the display is in HOLD. This feature is a convenient way to convert angles from one unit to another.

- 6 **UP/DOWN ARROWS** - Left and right indicators point toward level or plumb (whichever is closer). Indicators get shorter as the **SmartCamber** tool gets closer to level (°), or plumb (90°).
- 7 **LOW BATTERY** - Low 9V battery indicator. Replace battery as soon as possible. Battery life is typically 100 hours. **+ -**
- 8 **DIGITAL DISPLAY** - Display readout of current measurement.
- 9 **LISTEN & LEVEL AUDIO** →
- 10 **° % IN/FT MODES** - Indicates measurement “mode”: Degrees (°), Slope (%), Pitch (in/ft).

**Note:** Display reads right side up when the **SmartCamber** tool is upside down!



## Preparing the SmartCamber Tool

### *Squaring the Frame (Fig 2, 3, and 4)*

Squaring the tool is a procedure to adjust the bottom feet to be square to the long standoffs. If the tool should happen to be mishandled, it should be re-checked. A window works well as vertical surface.

1. Turn the SmartCamber tool **ON**.
2. Horizontal short feet adjust (fig 2). Place the SmartCamber tool on a flat smooth surface (up to 7° from level). Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL1** will appear and then a **flashing number**.
3. Rotate the SmartCamber tool end-for-end (fig 2). Push and hold the **CALIBRATE** button, **CAL2** will appear and then a **number**.
4. Plumb short feet adjust (fig 3). Place the SmartCamber tool against a window with long feet up. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL1** will appear and then a **flashing number**.
5. Move the SmartCamber tool to the other side of the window. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL2** will appear and then a **number**.
6. Repeat steps 4 and 5 with the long feet down (fig 4). Now the SmartCamber tool is calibrated for plumb.
7. Turn the SmartCamber tool **OFF**.
8. Put the SmartCamber tool up against window on it's long feet (fig 5). Press and hold **CALIBRATE** while pressing the **ON** button **CAL2** will appear and then the **number 0**.
9. Now put the SmartCamber tool up against window on its short feet. Adjust the short feet until tool reads 90°. Your frame is now square.
10. The SmartCamber frame is now square. Continue to calibrate the tool for use.


### *Level Surface Setup (Fig 1)*

1. Turn the SmartCamber tool **ON**.
2. Put SmartCamber tool up against the window on the long feet. Wait 10 seconds. Push and hold **CALIBRATE** button, **CAL1** will appear then a **flashing number**.
3. Go to other side of your vertical plane (visibly close as possible to the same plane on the other side). Wait 10 seconds. Press and hold **CALIBRATE** button, **CAL2** will appear and then a **number**. This number will read the same on either side of your verticle plane. Your tool is now ready to be used on a level surface.



### ***Non-Level Surface Setup/Zero Adjust (Fig 2, 3, 4 and 5)***

1. Turn the SmartCamber tool **ON** .
2. Put the SmartCamber tool on a horizontal surface on it's short feet (fig 2). Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL1** will appear and then **a flashing number**. Rotate the tool 180°. Push and hold the **CALIBRATE** button, **CAL2** will appear and then **a number**. You have set the tool to level.  
**Note:** The tool can now be used for leveling the floor.
3. Plumb short feet adjust (fig 3 and 4). Place the SmartCamber tool against a window with long feet up. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL1** will appear and then **a flashing number**.
4. Move the SmartCamber tool to the other side of the window. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL2** will appear and then **a number**.
5. Repeat steps 4 and 5 with long feet down (fig 4). Now the SmartCamber tool is calibrated for plumb.
6. Turn SmartCamber tool **OFF** .
7. Put the SmartCamber tool on your non-level surface on it's short feet. Wait 10 seconds. Press and hold the **CALIBRATE** button while still pressing the CAL button press and hold the **ON** button, **CAL2** will appear and then the **number 0** this is called **zero adjust**. Your tool is now ready to be used on a non-level surface. **(You must do this step for each wheel).**

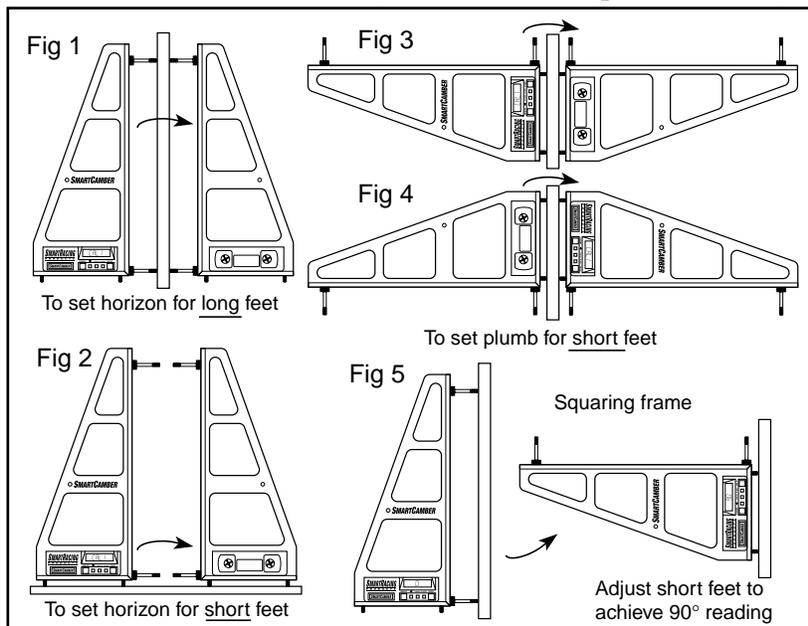

Be sure you are in the **degree** mode not percent or inches/foot mode.



## What is Caster?

The caster angle is the inclination of the imaginary line the spindle pivots around. Typically tipped towards the rear of the car. The caster angle creates forces that result in the following:

First, they (the forces) return the wheels to the center-steer position after a turn is made.

Second, they make the vehicle track straighter and more predictable.

Third, they increase or decrease the camber gain of the wheel, as it turns, to help maximize the traction potential of the tire.


**Note:** High caster angles coupled with wide tires can make the steering very heavy and hard to turn.

## Measuring Caster

Caster is calculated by measuring the camber angle in two different positions, and then putting those measurements into a simple formula.

To measure caster, do the following, but be sure to take your time the first few times you do it:

1. Start with the left front wheel.
2. Place the layout template sheet (included) on the floor and use chalk (or paint for permanent marking) to scribe lines that are about a foot longer than the template. Then remove the template and connect the lines as on the template.
3. Roll the car until the front wheel is on the centerline (CL) axis and parallel to the X axis.
4. Turn the steering wheel until the left front wheel is parallel to the Z axis.
5. Use a stiff piece of cardboard approximately 7"x18" as a "plane" reference template (flat sheet metal is better), carefully put the plane on the Z axis line and carefully lean the template against the tire. If it touches the tire evenly, then the wheel is turned 20°.
6. Measure the camber angle in this position and note.
7. Steer the wheel back through the center-steer position and parallel to the Y axis. Repeat the plane template alignment method.
8. Measure the camber angle in this position and note.

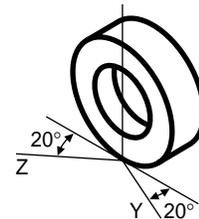



9. Calculate the caster angle using one of the following examples:

Note: 1. Example No. 2 is the most common.

2. What you are trying to achieve is camber difference from turning left and right.

1. If both measurements are negative then

**Subtract the small number** -3 \*  
**from the larger number** -1

Equals 2

Multiply 2 by 1.5 = 3

The wheel has 3° of caster.

2. One negative and one positive, then

**Add the numbers together** -3 \*  
+1

Equals 4

Multiply 4 by 1.5 = 6

The wheel has 6° of caster.

3. If both are positive, then

**Subtract the smaller number** +3 \*  
**from the larger number** +1

Equals 2

Multiply 2 by 1.5 = 3

The wheel has 3° of caster.

**Note:**  
**If you cannot turn your wheels 20° determine the angle you can turn both wheels. Note that number and use the multiplication factor below. The procedure does not change, however.**

**Multiplication Factors**

20° = 1.5

15° = 2.0

10° = 3.0


\* Ignore Negative and Positive symbols when adding and subtracting

10. Make whatever adjustments are required and remeasure until you have the angle you want.



11. Repeat the same steps on the right front wheel.

12. Reset the toe (can be done with SmartRacing Products-SmartStrings). Any changes to the caster or camber angles will have changed the toe settings.

Left arrow up and right arrow down equals Positive Camber

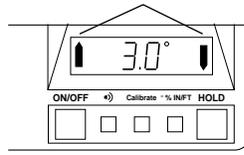

Left arrow down and right arrow up equals Negative Camber

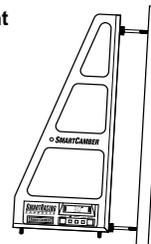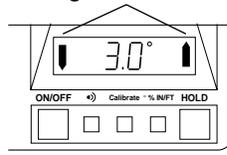

**Tech Note:**  
**It is helpful to put a temporary witness mark on the steering wheel hub to the steering column (with tape), so you always return to the same angle of reference. Also, zeroing the car is not necessary because you are only interested in the difference in the camber in the two positions.**



## What is Camber?

The inclination of the wheels from true vertical is commonly referred to as “Camber”; read as either positive or negative.

Positive Camber: As viewed from the rear, the tops of the tires are further apart than the bottom (very uncommon).

Negative Camber: As viewed from the rear, tops of the tires are closer together than the bottom (very common).

## Measuring Camber

1. Hold the SmartCamber tool against the wheel, which you are planning on measuring, at the twelve and six o'clock position. Adjust the sliding long standoff so it touches the wheel face near the edges (if the wheel has a curved face, at the top of the wheel, put a piece of racer's tape with a dot on it so you will always measure from the same location). Be sure the frame itself is not touching the tire.

**Tech Tip: Small pieces of Racer's tape placed where the pins contact the wheel will help protect the wheel finish. One of our customers suggested carburetor vacuum plugs, a great idea!**

**Note: As with any tool, the more you use it, the easier it is to use. The SmartCamber tool is no exception.**



## Non-Level Surface Alignment

Chances are, the surface that the car is sitting on is not flat or level. Even very good concrete floors have small dips and valleys in them.

You will need three things:

- A piece of 1.5" square aluminum box tubing (or long level) that is about 6" wider than the track width of your car (mark one side of the tubing with the words "Top Center");
- Two 1" sockets or equivalent (the idea is to have two round spacers that are the same height).
- Some 12" square smooth floor tiles for shims.

1. Position the car where it is to be aligned.
2. Mark the floor position of each tire with a pen or chalk.
3. Push the car back out of the way and put one socket where the center of one tire was and one where the other front tire was.
4. Put the aluminum box tube or level (with the Top Center marking facing upwards) on top of the two sockets.
5. Zero Adjust the tool as described earlier (page 5), this will need to be done for each side of the car.
6. Measure camber.

Take these tools everywhere you go because even if you are on rough crummy asphalt, this method will average out the surface and you will get good, accurate camber readings.



## Level Surface Alignment

Using this method, instead of resetting the tool to zero, you level the floor to true horizon and you never reset the module. Once you have recalibrated the module to true horizon (level) you simply measure each wheel individually and note its readings.

You will need three things:

- A piece of 1.5" square aluminum box tubing (or long level) that is about 6" wider than the track width of your car (mark one side of the tubing with the words "Top Center");
- Two 1" sockets or equivalent (the idea is to have two round spacers that are the same height).
- Some 12" square smooth floor tiles for shims.

- 1 As mentioned earlier, mark the four tire positions on the floor where you plan to do your setups. Reset the module to level by following the two step calibration procedures for Level on (page 5 fig 2).
- 2 Roll the car back and put the two sockets (or spacers) where the front tires would be and lay down the aluminum box tubing (with the marked "top center" up). Put the module in the center of the box tubing and note the reading. If it reads zero, your floor just happens to be parallel to true horizon and you should consider it your lucky day! If not, shim the side that is low using 12" x 12" linoleum floor tiles (they're about .060" thick) until the module reads zero. Double check it by spinning the module around so the display is facing the other direction; it should still read zero.
- 3 Now move the spacers and tubing to where the rear tires would be and repeat the process until the module reads zero.  
Note: Mark the floor or a logbook so you know how many tiles to use next time.
- 4 You can then check to see if the floor is level fore and aft by putting the spacers and tubing where the left front and left rear tires would be and check it. If it is way off (a couple of degrees), you should shim accordingly. This is really only an issue if you're checking the angle of attack, corner weighting - or checking the CG position.
- 5 Push the car back into position and measure away!
- 6 Be sure to roll car back and forth after any changes to the camber and re-check.





## Tips and Suggestions

1. Keeping a log book for your car is a great idea. Noting all important race information and suspension settings and how they have worked in the past, is a real time saver. The next time you are setting up your car, to run at the same track, you can reference those past settings and dial them in.
2. Sometimes the long standoffs are not long enough for certain fender shapes and configurations. We do have longer standoffs available for you to order, or we can make a custom length for you. (See below)
3. On many cars, there is a location that is level and true to the car. This location, if found, works great for “zeroing the module” to the plane the vehicle is sitting on. This surface needs to run across from the right side to the left side, not the length of the car front to rear.
4. Practice using your SmartCamber tool, the more you use it, the faster and easier it will be to make changes.
5. The SmartCamber tool module is very sensitive (but not emotional!). When measuring any angle, wait 3-5 seconds for the reading to stabilize.
6. Some wheels have more run-out than others and give you erroneous camber readings. To correct for this error, mark the top and bottom of the wheel. Measure in that position. Spin the wheel half a turn and remeasure. Take the average of those two readings and that will be your true wheel angle.

## Optional Parts

Besides the Hands Free adapter, please note the following:

1. Pro 360 module, measures full 360° with Alternate Zero setting feature. Use part # 011021, sells for \$226.95
2. Pro 3600 module, also measures full 360° with Alternate Zero setting feature. It also has a RS-232 serial port connector so it can be attached to a computer. Use part # 011031, sells for \$329.00
3. 3.75” Standoffs. Use part # 011141, sell for \$1.62 each

See our website at [www.smartracingproducts.com](http://www.smartracingproducts.com) for more information.




## Module Calibration for Use *Without Frame*

Before your SmartCamber module can be used, the module (new or used) must first be calibrated to itself. The calibration instructions are also on the back of the module itself.

### Procedure for Level

1. Turn the SmartCamber module **ON**.
2. Place the SmartCamber module on a flat smooth surface (table top). Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL1** will appear and then a **flashing number**.
3. Rotate the SmartCamber module end-for-end. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL2** will appear and then a **number**.

The SmartTool has now been calibrated for level.

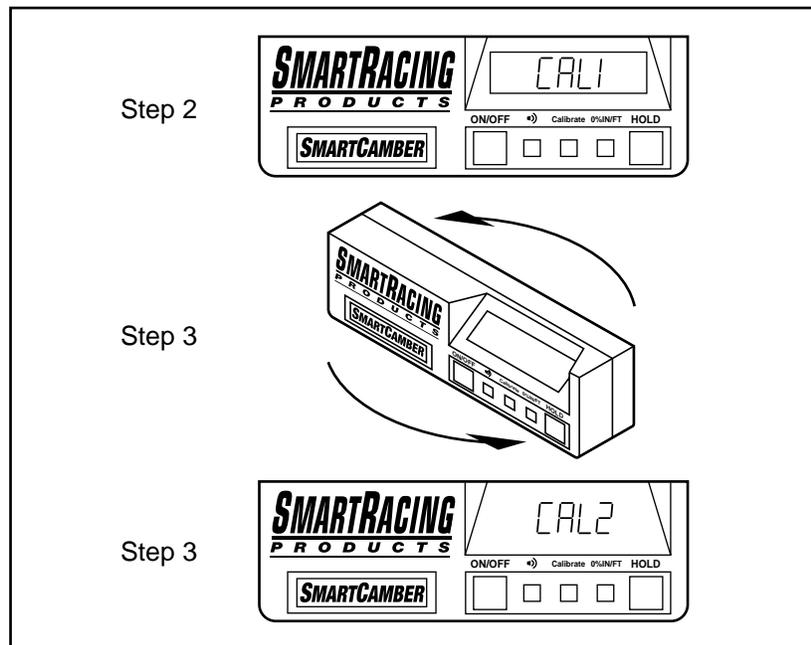


### Overhead Measuring for Level

If you need to read the display upside down, you must calibrate the top surface of the angle finder. Repeat the steps described above except the SmartCamber module should be upside down.



## Procedure for Plumb

1. Turn the SmartCamber module **ON**.
2. Place the SmartCamber module against a flat vertical smooth surface with the LCD display at the bottom, and away from the surface. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL1** will appear and then a **flashing number**.
3. Rotate the SmartCamber module edge-for-edge along its long axis (i.e. LCD display is still at the bottom, but is now against the flat vertical surface.) The display should face away from you. Wait 10 seconds. Push and hold the **CALIBRATE** button, **CAL2** will appear and then a **number**.
4. Repeat the steps above for plumb, except with LCD display at the top. Now the SmartCamber tool is calibrated for plumb.

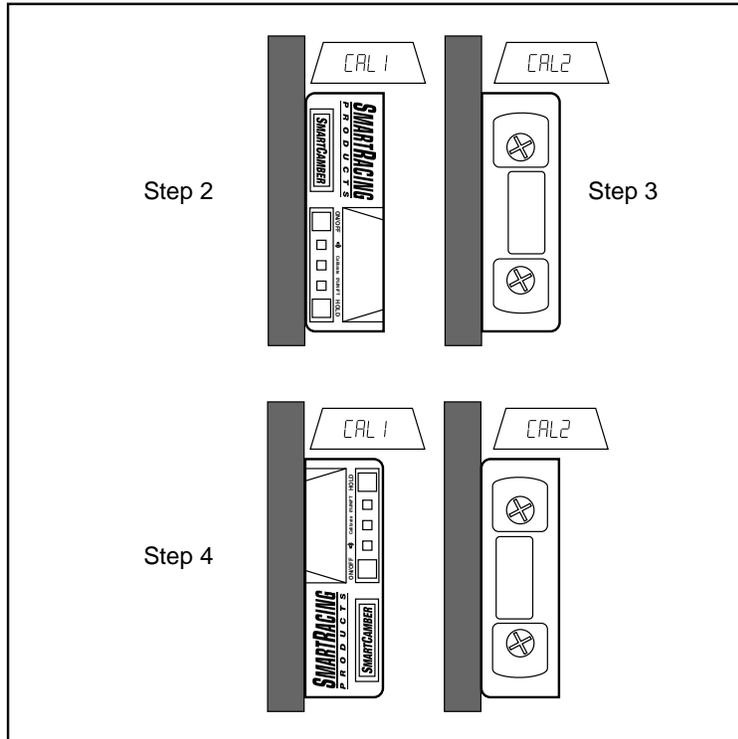

## If “CAL ALL” is displayed

1. This means that the tool is out of calibration.
2. Calibration must be done as explained in “Module Calibration for Use *Without Frame*” page 12 and 13.



# **SMARTRACING™**

## **P R O D U C T S**

***A Company Developing Smart Racing  
Products Through Engineering***

491 McGlincey Lane No. 4, Campbell, California 95008  
408-369-9997 FAX 408-369-9915



**For Customer Service or Technical Support**

**Call 1.408.369.9997 or fax 1.408.369.9915**

**E-mail: [smartracingproducts.com](http://smartracingproducts.com)**

SmartCamber, SmartRacing Products, SmartTool and  
SmartLevel are registered trademarks, used by

permission where applicable.

Copyright 2002, 2004, 2005

Rev. 9

April 2005

SmartRacing Products

491 McGlincey Lane, #4

Campbell, CA 95008 USA

Part #011073

